

## A0 CT-HUB function implementation

1.If only two chargers are used to connect the CT-HUB, no resistance changes are required

2. If more than two charges are connected to the CT-HUB, remove the 120R resistor above each A0, as shown in the red circle in Figure 1.

3. When multiple A0 chargers are connected to the CT-HUB, add a 120R terminal resistor to the 485 bus of the last charger, as shown in Picture 2.

Or leave the 120R resistance of the last RD0041 charger.

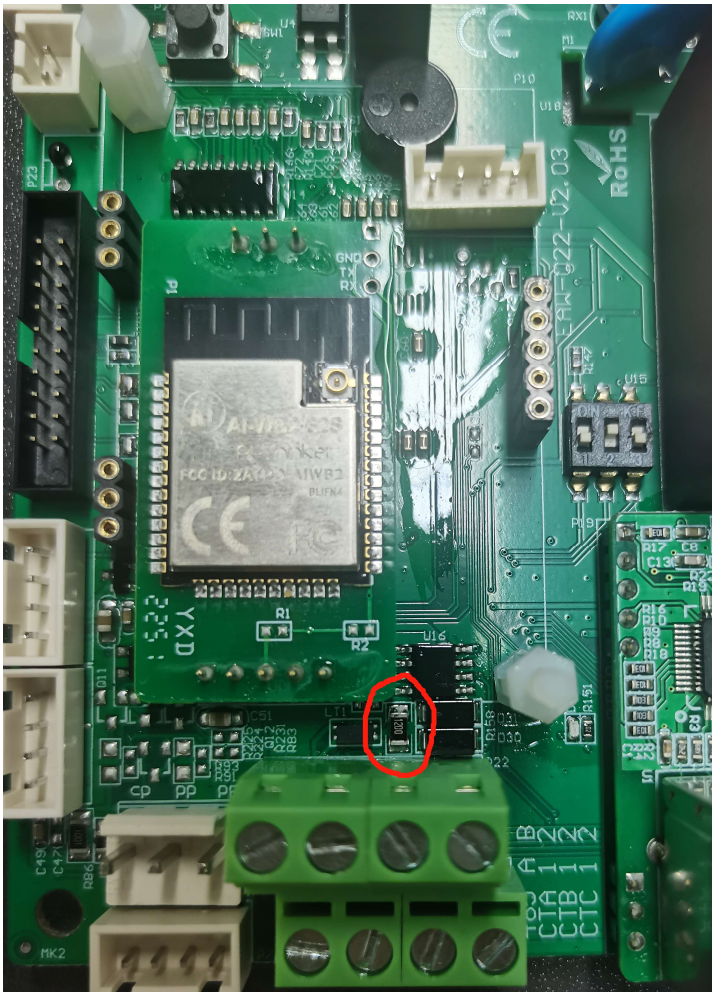


Figure 1

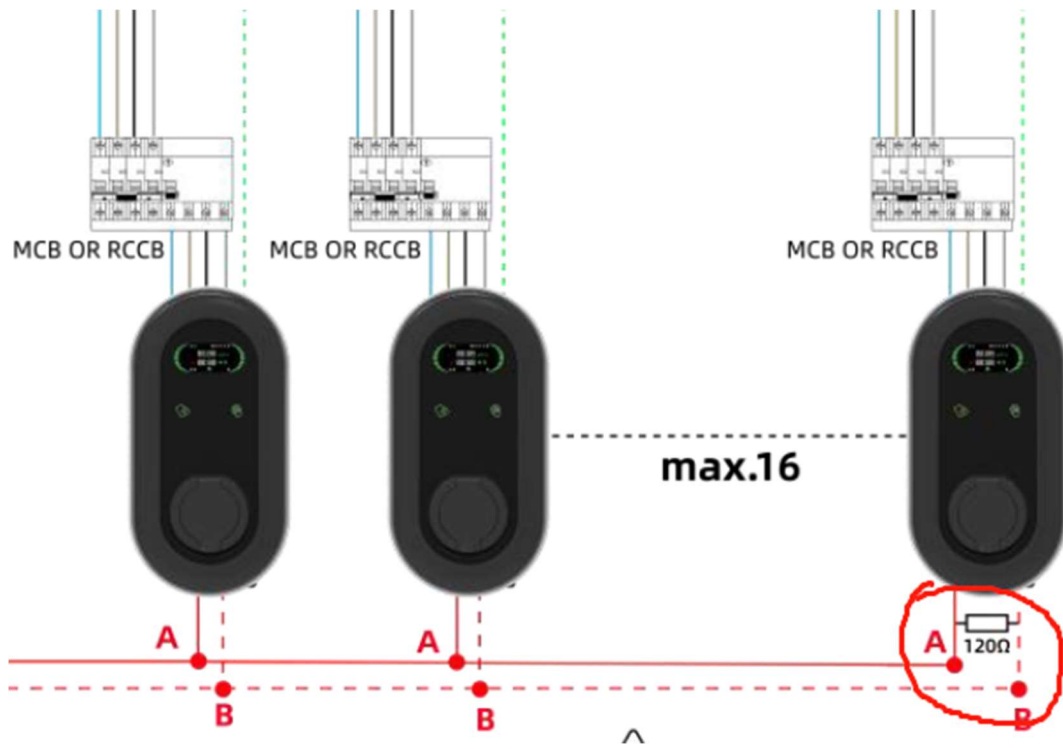


Figure 2